

# Greenmaster Pro-Lite Spreader Setting Guidelines

## Rotary Spreader Settings for Accupro 2000, SR 2000, SR-1, R8A

Single pass at full rate

Cone Setting	Amount of product applied (g/sq.m.) after one run				
	20	25	30	35	40
9	L1/2	M	N	O	P

Double pass at half rate

Cone Setting	Amount of product applied (g/sq.m.) after one run				
	20	25	30	35	40
9	J	J1/2	K	L	L1/2

Spread width, dependant on spreader and operator application: 3m - 4.5m

## Drop Spreader Settings for SS1 and SS2

Single pass at full rate

Amount of product applied (g/sq.m.) after one run

15	20	25	30	35	40	45
3.50	4.00	4.50	4.75	5.00	5.25	5.50

These recommended spreader settings are given for a walking speed of approximately 5km/hr. These settings are for guidance only. Exact rates, using settings above, cannot be guaranteed - rates depend on the spreader itself and accuracy of operator. Calibrate the spreader at regular intervals, including effective spreading width.



growing success